

GRAND RENTAL STATION
(908)850-8515
105 MAPLE AVE.
HACKETTSTOWN, N.J.
07840

LOG SPLITTER OPERATING INSTRUCTIONS

- (1) Be sure to turn OFF fuel when towing from Grand Rental Station to job site.
- (2) When at job site, turn gas and choke ON.
- (3) Start engine.
- (4) After splitter is started, turn off choke.
- (5) Operate this machine with extreme care.
Keep your hands away from moving parts
- (6) When finished and ready to tow back to Grand Rental Station, be sure that gas is turned OFF.
- (7) If gas is not turned off during towing, machine may not start or run properly.
- (8) Grand Rental Station is not responsible for flooding of machine and lost time if these directions are not followed.