

GRAND RENTAL STATION  
COTTON CANDY MACHINE INSTRUCTIONS  
(908)850-8515  
105 MAPLE AVE.  
HACKETTSTOWN, N.J.  
07840

#### ELECTRICAL REQUIREMENTS

THE COTTON CANDY MACHINE REQUIRES A 15 AMP, 120 VOLT, 60 CYCLE ELECTRICAL SERVICE.

#### CONTROLS AND FUNCTIONS

MAIN SWITCH - TURNS MOTOR "ON" OR "OFF" AND SUPPLIES CURRENT TO THE HEAT SWITCH.

HEAT SWITCH - TURNS CURRENT TO THE HEATING ELEMENT "ON" OR "OFF".

HEAT CONTROL - INCREASES OR DECREASES VOLTAGE TO HEATING ELEMENTS USING A GRADUAL DIAL.

#### OPERATING INSTRUCTIONS

- (1) WITH MAIN SWITCH "OFF", FILL FLOSS HEAD. ALWAYS FILL IT 90% FULL SUGAR. THIS 90% LEVEL IS NECESSARY TO OBTAIN A BALANCED CONDITIION IN THE FLOSS HEAD. DO NOT OVERFILL!! EXCESSIVE VIBRATION WILL OCCUR IF OVERFILLED. BEFORE TURNING THE POWER ON, MANUALLY TURN THE HEAD TO BALANCE OUT THE SUGAR. THIS WILL ELIMINATE EXCESSIVE VIBRATIION OF THE HEAD.
- (2) TURN MAIN SWITCH AND HEAT SWITCH "ON".
- (3) TURN HEAT CONTROL KNOB CLOCKWISE TO MAXIMUM SETTING TO INITIATE THE FASTES POSSIBLE WARM UP.
- (4) THE MACHINE SHOULD START MAKING FLOSS IN A FEW SECONDS. WHEN THE UNIT STARTS MAKING FLOSS, YOU MUST REDUCE THE HEAT. TURN THE HEAT CONTROL KNOB CLOCKWISE TO ELEMINATE SMOKING. IF YOU OPERATE THE UNIT AT "START UP" SETTING, YOU WILL CARBONIZE THE HEATING ELEMENT.
- (5) ONCE YOU FIND THE IDEAL SETTING FOR THE HEAT CONTROL, OPERATE WITH THE SETTING NEAR THE POSITION EACH TIME.